
DE 818 Diffractive Optical Element

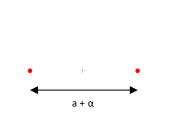

- Element number: DE 818
- Product revision: A
- Description: 1 : 2 beam splitter
- Substrate material: fused silica
- AR coating on both sides of the substrate: R < 0.5% within recommended wavelength range
- Substrate size: 15.0 mm x 14.1 mm
- Thickness: 2.3 mm
- Design wavelength: 1064 nm
- Recommended wavelength range: 1030 nm / 1064 nm *
- Typ. diffraction Efficiency: 79% at design wavelength


Within the recommended wavelength range, the zeroth order (Z0) has a significant lower power than the desired diffraction orders. Spot spacing and angular separation, and the ratio between zeroth order and desired orders will vary most with the wavelength. Diffraction efficiencies given on this datasheet have been measured using elements of product revision A.

The DOEs are best used with collimated or convergent laser sources. The microstructure surface should be oriented towards the laser. The 0-order spot is equivalent in size and shape to the original beam, but its power is attenuated.

Diffraction angles & efficiencies

Wavelength	Pattern Size @ 100 mm Distance	Pattern Angles
λ [nm]	a [mm]	α [°]
980	0.24	0.14
1030	0.25	0.15
1064	0.26	0.15

Table 1: Pattern size and pattern angle depending on the wavelength

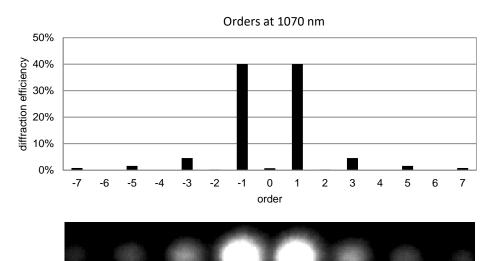


*the recommended wavelength range is defined with Z0≤2%

HOLOEYE Photonics AG Volmerstr. 1 12489 Berlin, Germany doe@holoeye.com www.holoeye.com

MOUNTED VERSION

For testing or setups under laboratory conditions, we offer a version mounted in a black anodized 25 mm aluminum frame for use with standard laboratory holders.

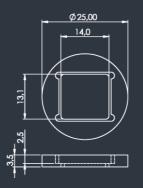

25 mm anodized aluminum mount with 14.0 x 13.1 mm clear aperture

COLLIMATED /

The laser can be collimated for long-range use or converging for a fixed working distance. Please note that the size/thickness of each spot or line depends on the focusing of the laser.



DE 818 Rev.A – v 0.1 – Specifications are subject to change without notice.